

# Fencing Made Easy



**SUITS 2.5mm WIRE**


**Battens supplied in 3 types**  
**3-9 Wires • 5-7 Wires • 6-8 Wires**

## STEP ONE

Ensure Fence Wires are in place at the correct pitch to suit spacing set on the Batten type. Wires should be strained to the appropriate tension as recommended by the Wire Manufacturer.

## STEP TWO


Insert Batten down through Wires as shown, making sure to alternate the Wires on each side of the Batten.

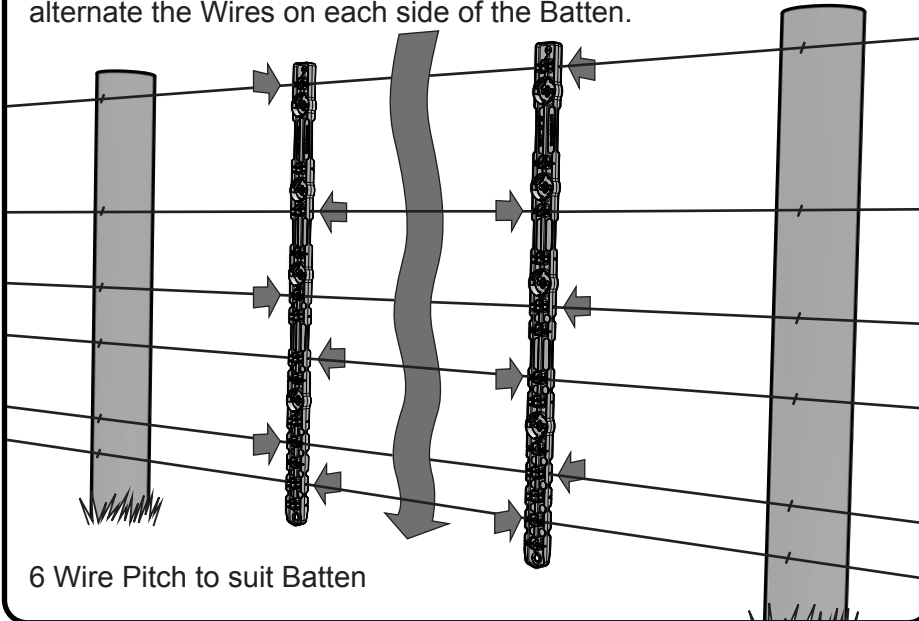

## STEP THREE


Click Wires into grooves as shown

Wire Pitch ID at top of Batten

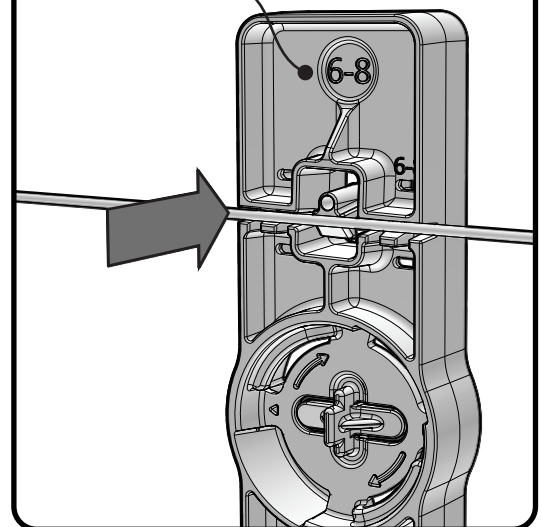

## STEP FOUR

Repeat STEP 2 & 3 for next Batten location, but rotate the Batten 180° through its vertical axis so that the grooves on the Batten are on the opposite side to the previous Batten.

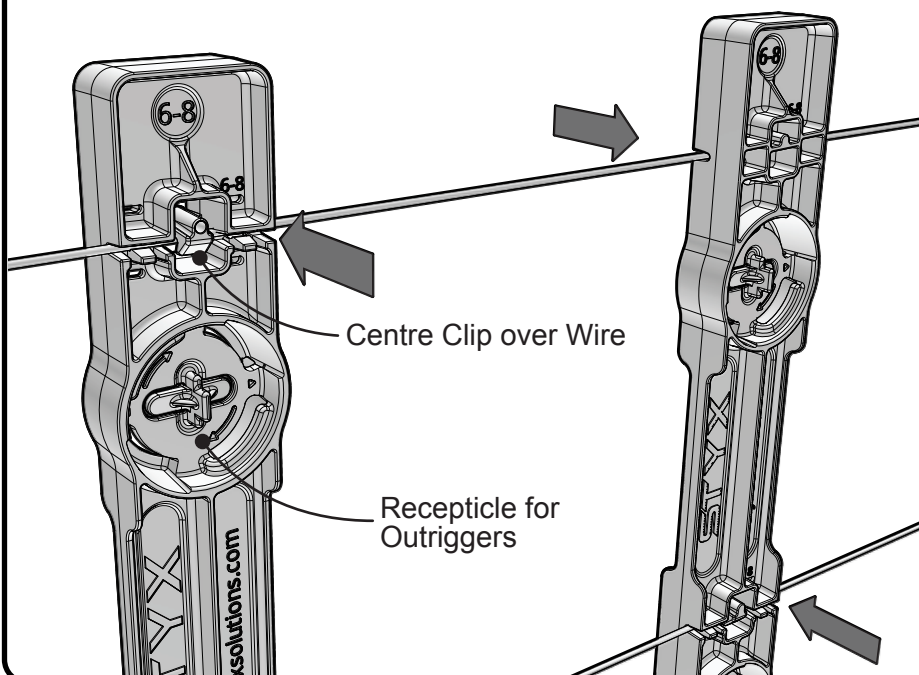

## STEP FIVE

OPTIONAL

Additional Slots for Cable Tie or Wire Lacing

